

Descrambling Table

The SNEED-PACK Descrambling Table is designed to seamlessly integrate with conveyors or other automation equipment, providing an efficient solution for separating and feeding bottle groups within your production line. This guide will help you to assemble and start using your descrambling table. For any inquiries or assistance, please contact our dedicated technical support team at (833) 926-3464, extension 2.

Assembly

- Some components will need to be assembled. Begin by separating them into three parts as they are portrayed in Figures 1 – 3.



Fig.1

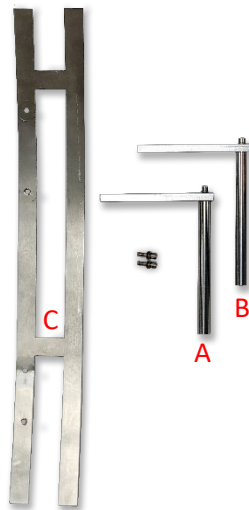


Fig.2



Fig.3

Figure 1: The Loading Table

1. Attach the loading table (Figure 1) to the main assembly.

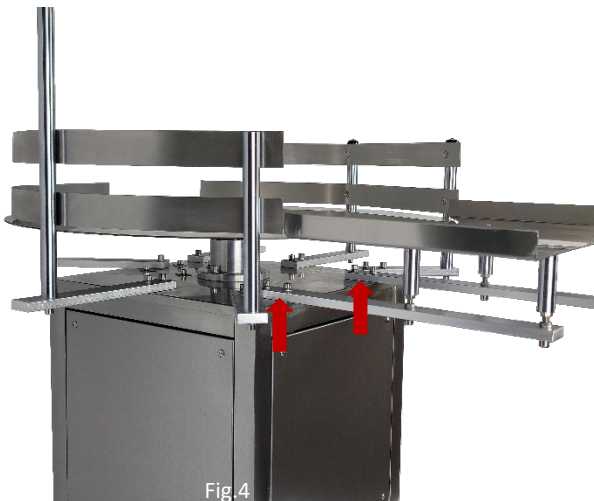


Fig.4

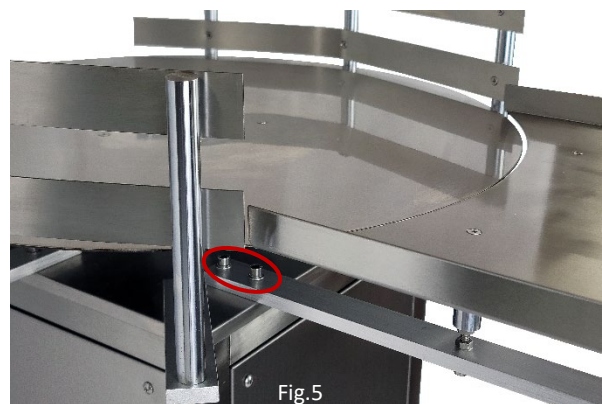


Fig.5

Figure 2: The Guide Rail

1. Attach the mounting posts (A & B) from to the Separating table
2. Secure the guide rail (part C) to the mounting posts (A & B) with the provided philips head screws. The guide may need to be bent to the correct angle to allow your bottles to pass through.

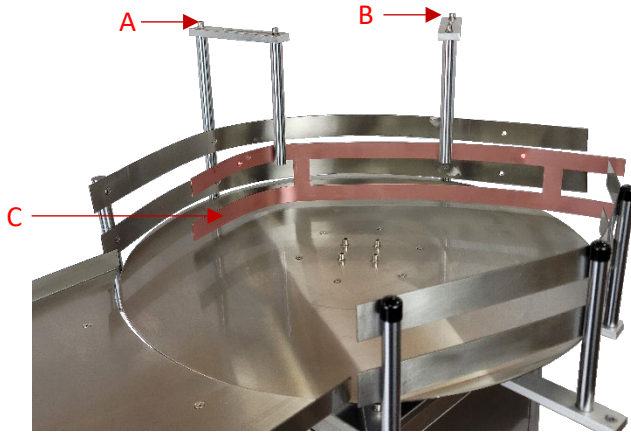


Fig.6



Fig.7

Figure 3: The Descrambler

1. Assemble the descrambler from the parts in Figure 3 as seen in the image below

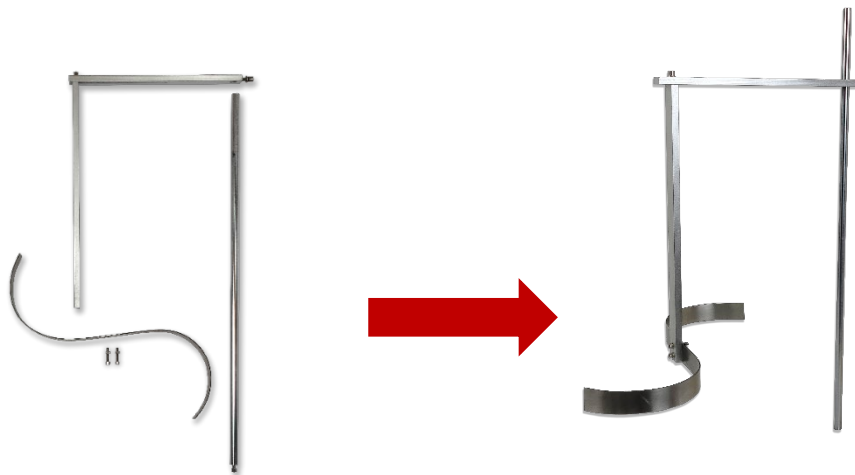


Fig.8

2. Install the assembled descrambler and adjust it so that the curve of the S-guard points directly to the input tray.



Fig.9



Fig.10

The Speed Control

6. The Descrambler speed can be adjusted with the control knob.



Fig.11

For Technical support please visit us on our help desk at (<https://help.sneedcoding.com/>)



At the Sneed Coding help desk you can access a wealth of technical documentation and instructional videos on all our products. Whether you prefer to chat with one of our seasoned pros or schedule a video meeting with a specialist, we are here and eager to assist you in any way we can!